


Pneumatic Hole Punch

Parts Breakdown

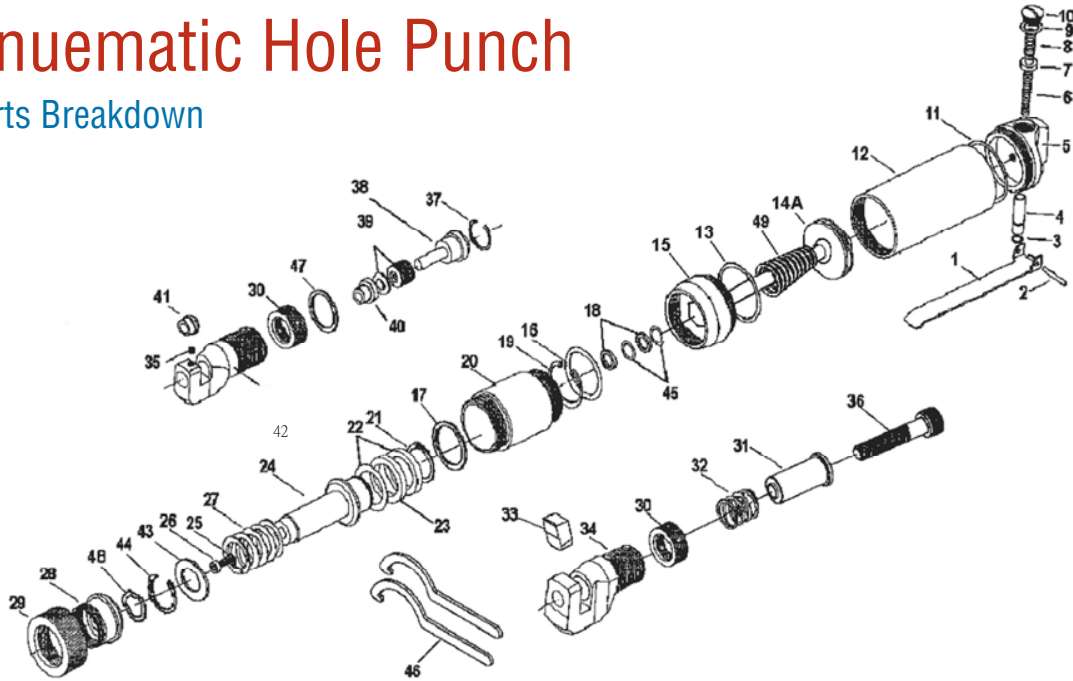

Ref. No.	Part No.	Description	Q'ty /Tool		Ref. No.	Part No.	Description	Q'ty /Tool	
1	SPMP050A01	Throttle Lever	1		34	SPMP05034	Holder	1	
2	SPMP050A02	Lever Pin	1		35	SPMP05035	Set Screw	1	
3	SPMP050A03	O-Ring	1		36	SPMP05036	Screw	1	
4	SPMP050A04	Push Rod	1		37	SPMP05037	E-Ring	1	
5	SPMP050A05	Valve Body	1		38	SPMP05038A	Punch 4.0mm	1	
6	SPMP050A06	Spring	1			SPMP05038B	Punch 6.5mm		
7	SPMP050A07	Valve	1			SPMP05038C	Punch 5.5mm		
8	SPMP050A08	Spring	1			SPMP05038D	Punch 8.0mm		
9	SPMP050A09	O-Ring	1		39	SPMP05039A	Washer 4.0mm	15	
10	SPMP050A10	Screw	1			SPMP05039B	Washer 6.5mm		
11	SPMP050A11	O-Ring	1			SPMP05039C	Washer 5.5mm		
12	SPMP050A12	Housing	1			SPMP05039D	Washer 8.0mm		
13	SPMP050A13	O-Ring	1		40	SPMP05040A	Washer 4.0mm	1	
14A	SPMP050A14	Piston	1			SPMP05040B	Washer 6.5mm		
15	SPMP050A15	Cylinder Nut	1			SPMP05040C	Washer 5.5mm		
16	SPMP050A16	Gasket	1			SPMP05040D	Washer 8.0mm		
17	SPMP050A17	O-Ring	1		41	SPMP05041A	Bushing 4.0mm	1	
18	SPMP050A18	Seal	2			SPMP05041B	Bushing 6.5mm		
19	SPMP050A19	E-Ring	1			SPMP05041C	Bushing 5.5mm		
20	SPMP050A20	Housing	1			SPMP05041D	Bushing 8.0mm		
21	SPMP050A21	E-Ring	1		42	SPMP05042	Holder	1	
22	SPMP050A22	Seal	2		43	SPMP05043	Washer	1	
23	SPMP050A23	O-Ring	1		44	SPMP05044	E-Ring	1	
24	SPMP050A24	Hydr. Piston	1		45	SPMP05045	O-Ring	2	
25	SPMP050A25	O-Ring	1		46	SPMP05046	Wrench	2	
26	SPMP050A26	Screw	1		47	SPMP05047	Gasket	1	
27	SPMP050A27	Spring	1		48	SPMP05048	Wave Washer	1	
28	SPMP050A28	Clamp Screw	1		49	SPMP05049	Spring	1	
29	SPMP050A29	Clamp Nut	1						
30	SPMP050A30	Clamp Nut	2						
31	SPMP050A31	Flange Die	1		RK	SPMP050RK	Repair Kit Ref. No.-- 39(x15), 40, 43, 48		
32	SPMP050A32	Spring	1		SK	SPMP050SK	Service Kit Ref. No.-- 3, 6, 8, 9, 11, 13, 17, 23, 25, 27, 32,		
33	SPMP050A33	Flange Die	1						