


TRANSMITTER

To access the Transmitter security code switch or battery, remove the 4 screws in the back of the Transmitter case and open the case.

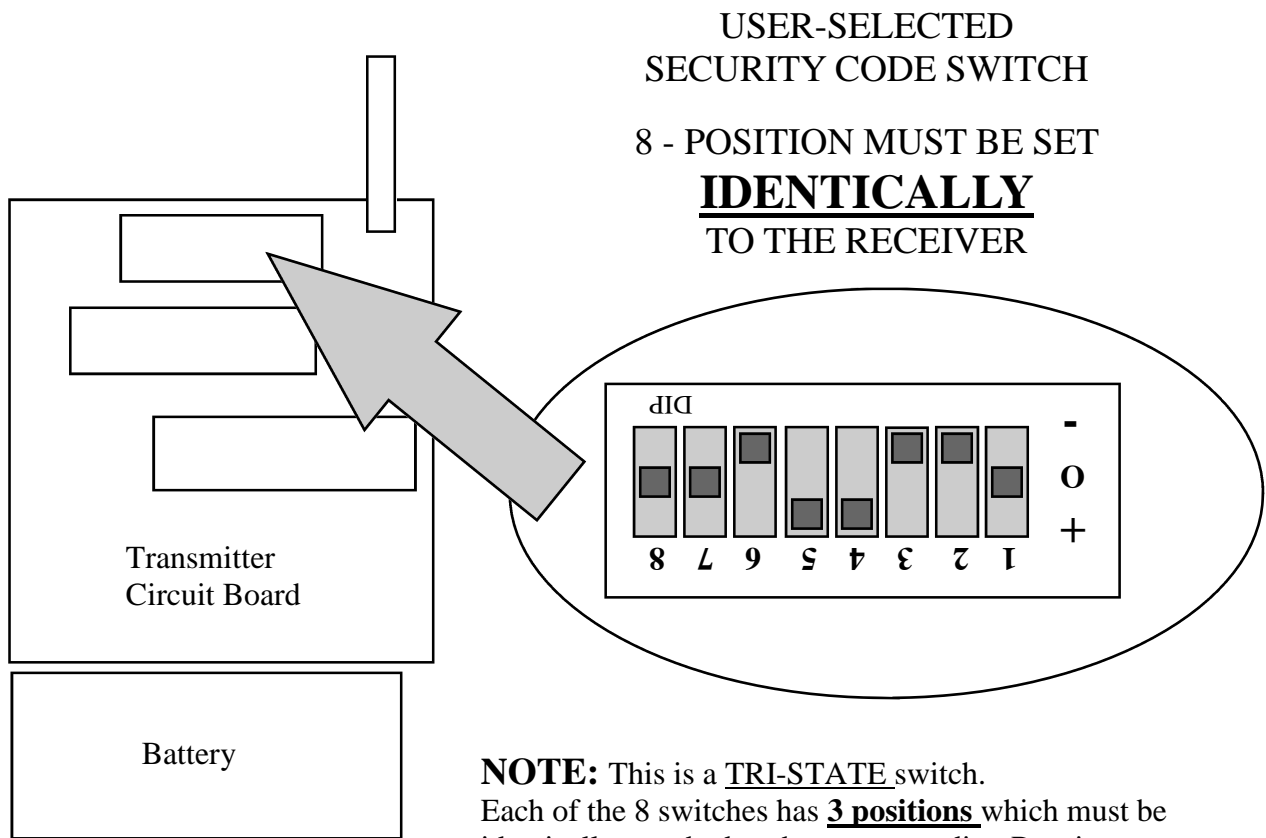

These code switches are fully compatible with 8-position Two-State On/Off switches by using the “+” **setting as ON** and the “O” **setting as OFF**.

OFF/STANDBY Switch

In addition to the function switches on the front of the case, there is also an OFF/STANDBY switch to prevent inadvertent operation of the push-buttons.

In the OFF position, the RED Led will not light when a function button is pressed and no signal is transmitted. In the STANDBY position, pressing a function button will cause the RED Led to light and control signal to be transmitted.

The Transmitter does NOT consume any power in the STANDBY position. Battery power is only used when a function button is pressed to transmit signal.