
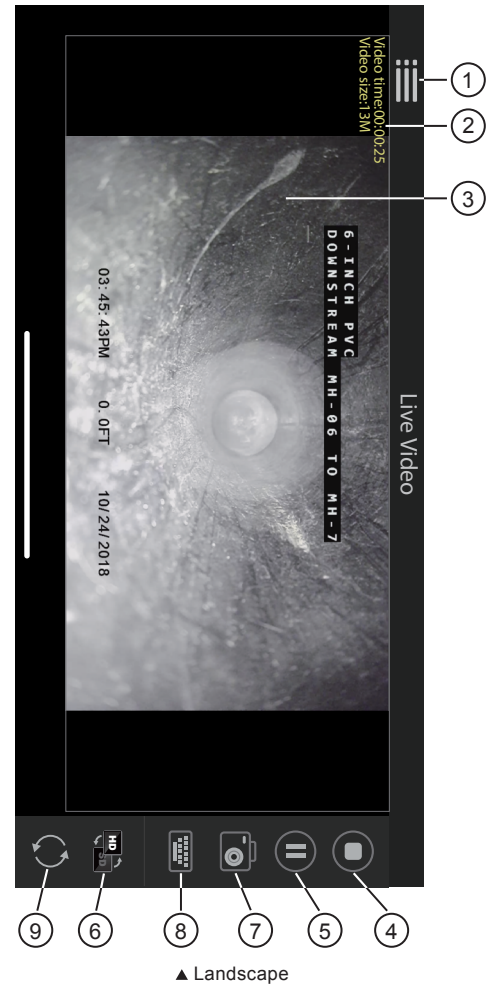


vCam Live View Mobile App Quick Guide V1.1

The vCam Live View Mobile is an app that connects a smartphone or tablet to the vCam-6 or vCamMX-2 control modules via Wi-Fi and streams live video into the app. The videos and pictures captured in the app can be shared using the smartphone or tablets native sharing options.

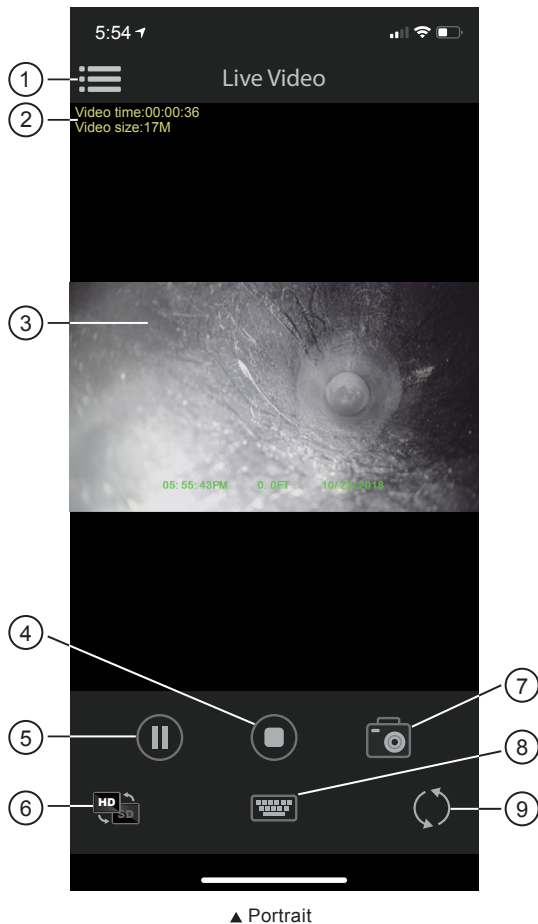

1	Access files
2	Video length and size
3	Live video stream
4	End video recording
5	Record/Pause video
6	HD/SD switch
7	JPEG image capture
8	Mobile text writer
9	Refresh Wi-Fi connection

Wi-fi connect

Activate the wi-fi in the control module.

vCam-6: Press the F12 wi-fi key on keyboard



vCamMX-2: Press Settings, then Wi-fi.


Find the vCam control module in the list of available networks and connect to it.

If prompted for a password use “12345678” to connect. Launch the Live View app when connected.

Recording


Press the Record icon to start the video recording.

The video elapsed time and estimated video size will appear in the upper left corner . The record icon will change to a Pause icon  while recording.

Use the Stop icon  to end the video recording.

When the stop icon is pressed a “Rename File” dialog box will appear. Press OK to accept the default file name or use the keyboard to rename the file.

Pause a recording video

Press the Pause icon . The video elapsed time and estimated video size will pause while the video is paused. Press Pause again to resume recording.

JPEG Image capture


Press the Camera icon  to take a JPEG picture.

A confirmation message will briefly appear confirming that the photo was saved.

HD/SD Streaming

Use the HD/SD icon  to change the streaming quality from HD to SD or back to HD.



Refresh

Use the refresh icon  to reconnect to the control module if the connection was lost or if a delay is seen in the video stream.

Text writer

Use the mobile keyboard  icon to add text to the recording video and pictures.

File Sharing

Look for the Sharing options in the Video Player  and Picture viewer  screens. The sharing options are native to the operating system of the smartphone or tablet.

File Management

In the File Manager the user can play the videos and pictures, rename folders and files or delete files or folders.


Rename

Swipe right on a folder or single file and select the Rename option. A keyboard dialog box will appear where the file can be renamed. Press OK when finished. If renaming a folder, all the files in the folder will also be renamed.

Delete - A single file or folder

Swipe right on a folder or single file and select the Delete option. A confirmation dialog box will appear asking are you sure and that deleted files cannot be recovered. Press OK to delete the folder or file, or press Cancel to halt the operation.

Delete – Multiple files or folders

From the main file manager screen press the Delete icon  in the upper right-hand corner. Empty check boxes will appear to the left of the folders and files. Touch each empty check box to select it. When the empty check box is touched it will be populated with a check mark.

Vivax-Metrotech Corporation

(USA)

3251 Olcott Street, Santa Clara, CA 95054, USA

T/Free: 800-446-3392

Tel: +1-408-734-1400

Fax: +1-408-734-1415

Email: sales@vxmt.com

Vivax-Metrotech Ltd.

(UK)

Unit 18-19, Woodside Road,

South Marston Industrial Estate, Swindon, SN3 4WA, UK

Free Phone: 0800 0281811

Tel: +44(0)1793 822679

Email: salesUK@vxmt.com

Vivax Canada Inc.

(Canada)

41 Courtland Ave Unit 6, Vaughan, ON L4K 3T3, Canada

Tel: +1-289-846-3010

Fax: +1-905-752-0214

Email: CanadianSales@vxmt.com