

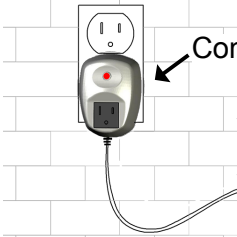
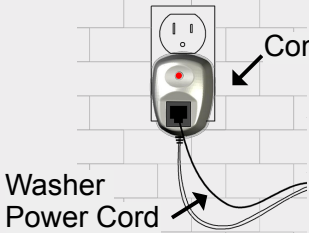
Overview:

The **WasherWatcher** is specially designed to prevent water damage caused by a laundry tub overflow after completing a simple and straightforward installation process. See **Alarm & LED Guide** section for LED and alarm specifications. This product is not rated for outdoor use.

READ PRIOR TO INSTALLATION:

To maximize product life it is recommended that the sensors are occasionally cleaned of debris and buildup (check about once a month).

Step-by-Step Installation

|               |  |  |
|---------------|--|--|
| <b>Step 1</b> | Plug the control module into the 120 VAC outlet.<br><br><b>NOTE:</b> The output will turn on and the LED will illuminate green.  |   |
| <b>Step 2</b> | Plug the washer power cord into the control module.<br><br><b>NOTE:</b> The WasherWatcher’s output is rated for a maximum of ¾ HP and/or 13.8 amps at 120 VAC.   |    |
| <b>Step 3</b> | Secure the <b>SENSOR</b> directly to the end of the washer’s discharge hose with tie wrap where the washer is intended to turn off. The ridge on the back of the sensor is designed to fit snugly against the end of the hose.<br><br><b>NOTE:</b> The hose should be positioned at least 6 inches from the bottom of the tub. |  |
| <b>Step 4</b> | TEST YOUR INSTALLATION BEFORE LEAVING IT FOR UNATTENDED USE.<br><br><b>NOTE:</b> To reset the WasherWatcher, unplug the control module from the 120 VAC outlet and then plug it back in.   | <ul style="list-style-type: none"><li>• Start the washer on a normal wash cycle.</li><li>• Dip the sensor into a cup of tap water.</li><li>• When water touches the sensor the washer should turn off.</li></ul> |

## Alarm & LED Guide

|                                     | Meaning  | Possible Cause  |
|-------------------------------------|--|---|
| <b>Green LED</b>                    | Output is energized and washer can be run.                       | None—Normal operation   |
| <b>Alarm &amp; Flashing Red LED</b> | Sensor is triggered and the washing machine has been turned off. | High water detected in laundry tub.<br><br><b>NOTE:</b> To reset the WasherWatcher, unplug the control module from the 120 VAC outlet and then plug it back in. |

### Warranty:

STAK Enterprises Inc. warrants the model **WasherWatcher** to be free from defects in materials and workmanship for its normal, useful life, for a period of 3 years from the date of purchase. STAK Enterprises Inc. makes no other express warranty for this device. No agent, representative, dealer, or employee of STAK Enterprises Inc. has the authority to increase or alter the obligations or limitations of the warranty. The company's obligation of this warranty shall be limited to the repair or replacement of any part of the WasherWatcher which is found to be defective in materials or workmanship under normal use and service during the day 3 year period of product use by original product owner commencing with the date of purchase. Owner must pay all shipping charges necessary to replace product covered by this warranty. This warranty shall not apply to acts of God, nor shall it apply to products which, in the sole judgment of STAK Enterprises, Inc. have been subject to negligence, abuse, accident, tampering, alteration, misapplication, or improper installation. Units in need of repair should be returned, shipping prepaid, to:

Customer Service Department  
STAK Enterprises, Inc.  
2413 West Algonquin Road #309  
Algonquin, IL 60102

THE DURATION OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSES, SHALL BE LIMITED TO THE NORMAL, USEFUL LIFE OF THE PRODUCT, COMMENCING WITH THE DATE OF PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.