


# Operation Guide CT100



Radio Thermostat Company of America

The CT100 communicating Z-Wave thermostat operates via a high-quality, easy-to-use touch screen. To set or adjust your CT100, simply touch your finger firmly to the screen. The screen will automatically light up and you will hear a “beep.” Do not use a sharp or metallic device; it will scratch the screen.


**Statement of use:** 100% Compatible with all popular residential HVAC systems; 24VAC single, two stage conventional heating systems (gas/oil/electric), heat pumps with up to two stages of heat and two stage auxiliary heat(electric or fossil), zoned forced air and zoned hot water (2 or 3 wire), millivolt systems (with a 12-24 AC or DC source), one or two stage cooling, and hybrid systems.

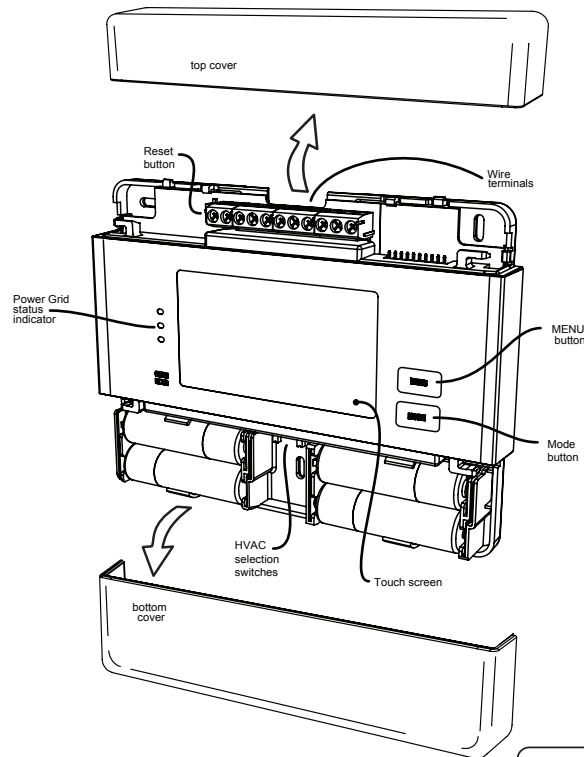


## Control Screens

# HOME Screen

Before you operate the CT100 please get familiar with these basic control screens. All the CT100 functions are accessed through these screens: HOME, MENU, and MANUAL. The CT100 touch screen technology allows you to select (by touching) an item and change it using the +/- arrows or the time arrows.

The **HOME** screen is displayed when the unit is operating. Touching the HOME icon  on another screen will always return you to this screen.

To set a Mode:  
Press the **MODE** button on the front. The CT100 will step through the modes HEAT, OFF, COOL, OFF, AUTO, OFF in order.

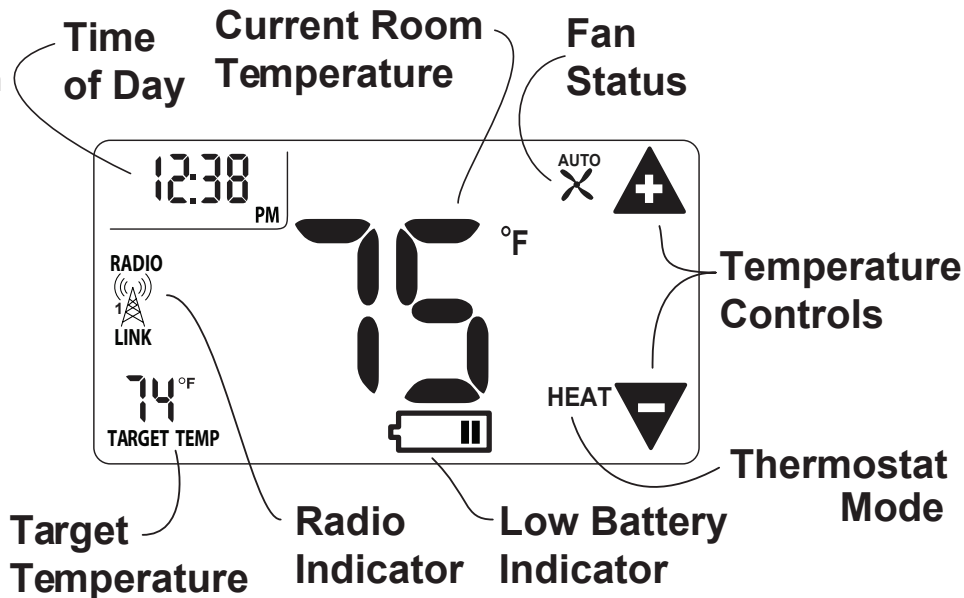

NOTE: Icon blinks when the function is running and back light is on.

# MENU Screen

The **MENU** screen is the gateway to many functions or settings of the CT100. It is displayed when you press the MENU button. [See pages 6-8 for details]

## Set Time

Touch this area to set the time of day  
Left arrow goes back, right arrow goes forward  
(Hold down for faster setting) (pg6)

## RECOVERY set

FAST or ECON

## Differential to set

for 2nd Stage start (pg8)

## Chirp set

Touch this to turn the audible chirp on or off

## Temperature Swing set

(pg6)

## RADIO icon

Shows radio status and connection

## Calibration control


Use this to calibrate your LCD display to match another thermometer (pg8)

## Set °C -°F

Touch this to set temp display units

## HVAC SETUP


Touch this in OFF mode to configure the unit to work with your HVAC system

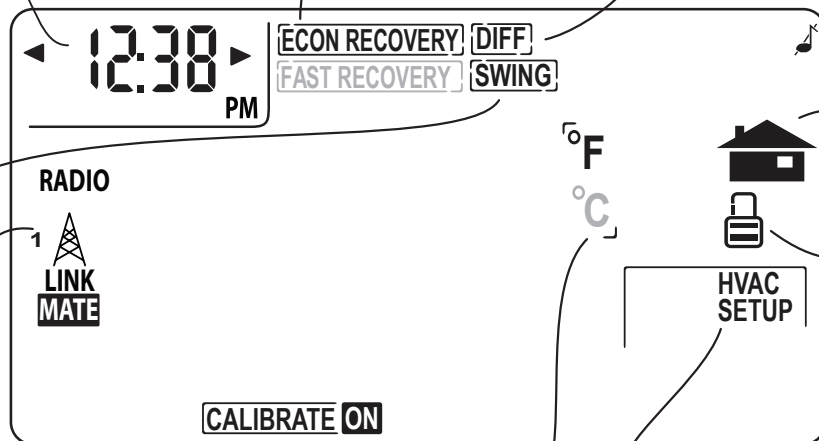

Return to **HOME** screen

**Lock Program**  
Touch for 5 sec to lock or unlock (pg7)

**MANUAL Screen** The **Manual Screen** control screen is where you can make temporary changes to your CT100's operation. From the HOME screen, touch the main temperature display to use this screen. [See page 9 for details]

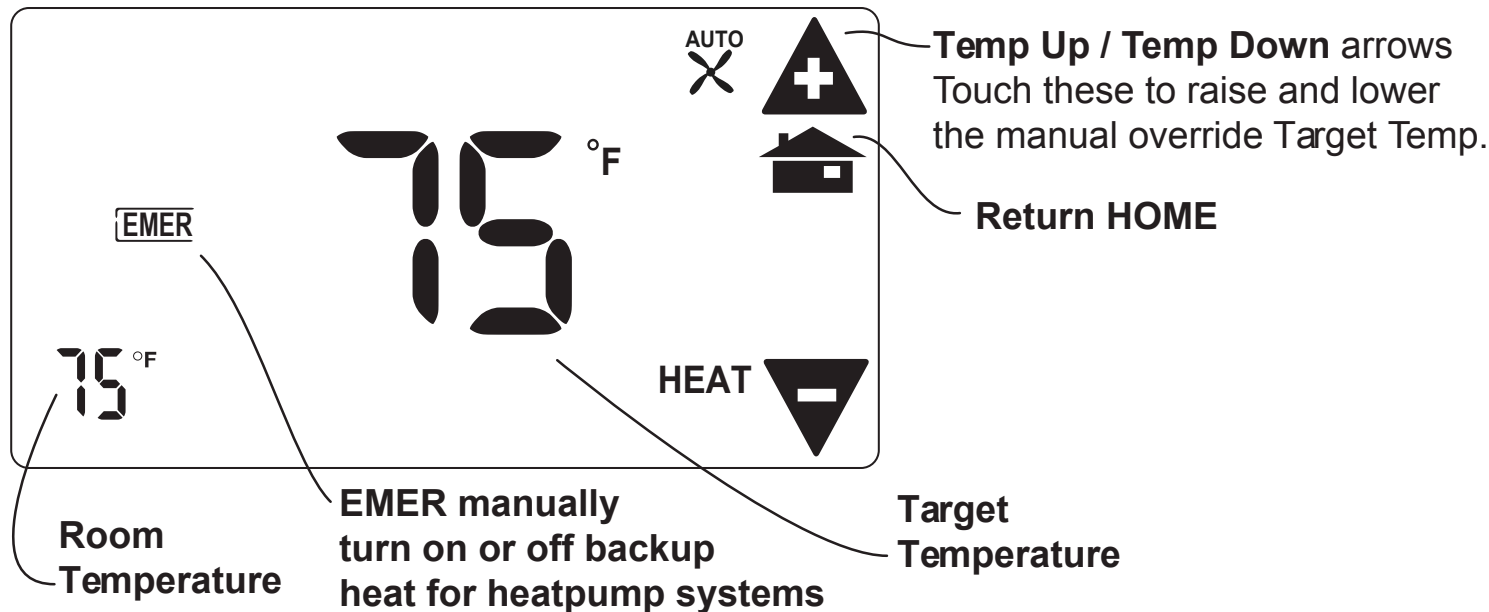

## Initial Settings

Press **MENU** to access the following commands (from HOME screen).

### Set time of day

Touch the Time of Day arrows to move the time selection forward or backward until it displays the current time. Touch and hold for faster setting.



### Set °F-°C display

Touch the °F and it will toggle to °C. °F °C

### Set audible chirp

Touch the musical note icon to select chirp or no chirp. Musical note icon with a curved arrow underneath it.

Return **HOME** by touching the home icon.



## MENU Screen Functions

Press MENU to bring up MENU screen.

### TIME of DAY

Touch the left (down) or right (up) arrows next to the time display to set the current time (1 minute per touch). Touch and hold the arrow for fast time set (15 minute jumps).

**SWING** (HVAC cycling rate) This feature allows you to set the desired variance in temperature between the CT100 setting and the room temperature required before the heating or cooling system will turn on—Swing range: 0.5° to 4.0°F (.25° to 2°C). For example, if SWING is set to 2.0° F and the CT100 is set to 70°F Target Temperature, the heat cycle will start when room temperature drops to 68°F. Similarly, the cooling system will start when the room temperature increases to 72°F. The HVAC then runs and will shut off at the Target Temperature.

To set **SWING**:

Touch SWING.

Touch the left/right arrows to set the SWING from 0.5° to 4.0°F (.25° to 2°C).

The HVAC will run more frequently at 0.5°F and less at 4.0°F. Default is 1°F.

Touch  to return to the MENU screen.




**Chirp set** - Touch this to turn the audible chirp sound on or off.





**Set** - Touch this to switch the temperature display scale from °F to °C .



**LOCK** (The CT100 has 2 lock modes)


Touch  icon for 5 seconds; the unit will go into the PARTIAL lock mode. The user can temporarily override the CT100 target with the +/- buttons only. (1 bar)

For FULL lock : Touch the  (1 bar) icon again for 5 seconds to go to full lock. No changes can be made in full lock  (2 bars). Once locked, the CT100 will respond just to **MENU**.

To UNLOCK , Press MENU.

Touch and hold  icon for 5 seconds for 2 bars (if not there already).

Then touch and hold the  icon for another 5 seconds. Each 5 second touch and hold must be separate.

Touch  to return to the Home screen.

## **CALIBRATE**

Your thermostat was accurately calibrated at the factory to  $\pm 1^{\circ}\text{F}$  of actual ambient temperature. You do have the option, however, to change the display temperature to match that of a previous thermostat, or to match another thermostat already in your home. The range of change is from  $-6^{\circ}\text{F}$  to  $+6^{\circ}\text{F}$  or  $-3^{\circ}\text{C}$  to  $+3^{\circ}\text{C}$ .

**To change your Thermostat Calibration**, touch **MENU** and then touch **CALIBRATE**.

Use the + / - to adjust the displayed temperature up or down, as desired.

The DELTA FACTOR that appears on the screen will also automatically increase or decrease for each  $0.5^{\circ}$  (F or C) adjustment so you can see your change. The large display will show the modified temperature reading that will be displayed on the HOME screen and used as the new room temperature.

Touch  to return to the Home screen.

**DIFF** (Used for multiple stage systems only, not on screen for single stage)

The differential is the number of degrees between the room temperature and the Target Temperature at which the 2nd stage will be used. DIFF may be set to a different value for HEAT or COOL. Default is  $2^{\circ}\text{F}$ , range is  $2^{\circ}\text{F}$  to  $6^{\circ}\text{F}$  ( $1^{\circ}$  -  $3^{\circ}\text{C}$ ).

To set the differential for the current mode, touch MENU and then DIFF. Use the arrows to set the DIFF. Recommend  $2^{\circ}\text{F}$  for very cold climates and  $6^{\circ}\text{F}$  for warm climates.

## MANUAL Screen Functions

The CT100 has 2 manual override commands. The manual screen is accessed by touching the large current temperature display in the middle of the HOME screen.

**IMPORTANT:** The MODE must be in HEAT, COOL, or AUTO to access the manual screen.

**TEMPERATURE** Touch the +/- arrows to select your desired Target Temperature. Touch HOME to return to operation.

**EMER** (in HEAT PUMP type)

If you set your CT100 for HEAT PUMP with auxiliary heat, EMER function is available on the MANUAL screen. If you touch EMER, it displays EMER|ON. Your HEAT PUMP is disabled and auxiliary heat is your sole source of heat. This manual override stays active until you toggle EMER off. Auxiliary heat is more expensive than the heat pump so use EMER only if the heat pump cannot keep up or is defective.

## Other Functions


### MODE Button

The mode button sets the CT100 to HEAT, COOL, AUTO, or OFF modes. Press it once to step to the next mode. If the CT100 is in OFF and you want to return to the mode you were previously in, touch the OFF indicator on screen.

### FAN Button

The fan control is normally in AUTO mode, meaning that the fan operates automatically with the HVAC system and the thermostat. When the fan button is pressed the fan goes ON; the fan will run continuously in this manual override until switched back to AUTO by pressing the FAN button again. [NOTE: Fan **ON** function is available in the OFF mode to allow simple ventilating.]

**RESET button** The RESET button re-boots the CT100 processor. It does not effect the target temperatures that have been stored in permanent memory.

**Compressor Protection** -  The CT100 has a minimum cycle time of 4 minutes to protect your compressor in cool and in heat pump (if you have one). The Home screen will show a small clock icon during this time and the compressor will not come on until the 4 minute delay is over.

### RH% Display

To display relative humidity touch the time display on the HOME screen - touch again to return.