

DISASSEMBLY

(see figure)

- Step 1: Unpack or open the life vest so that the manual inflator is visible.
- Step 2: Remove gas CO₂ cylinder by firmly rotating cylinder counterclockwise then pull out. **Discard cylinder.**

REARMING

Note: Rearming must follow the sequence below.

- Step 3: Check the new cylinder to be sure it has sensor ring attached.
- Step 4: Install new cylinder by engaging bayonet tabs in housing, pushing in then turning clockwise 1/8 turn to a full stop.



WARNING: PFD WILL ONLY INFLATE IF CYLINDER IS TURNED TO FULL STOP

- Step 5: Check to be sure service indicator is green.

Service Indicator




If green, unit is operable



If red, stop and service unit

HALKEY-ROBERTS PRO 3F[®] V86160 MANUAL INFLATOR REARMING/STATUS INDICATOR INSTRUCTIONS

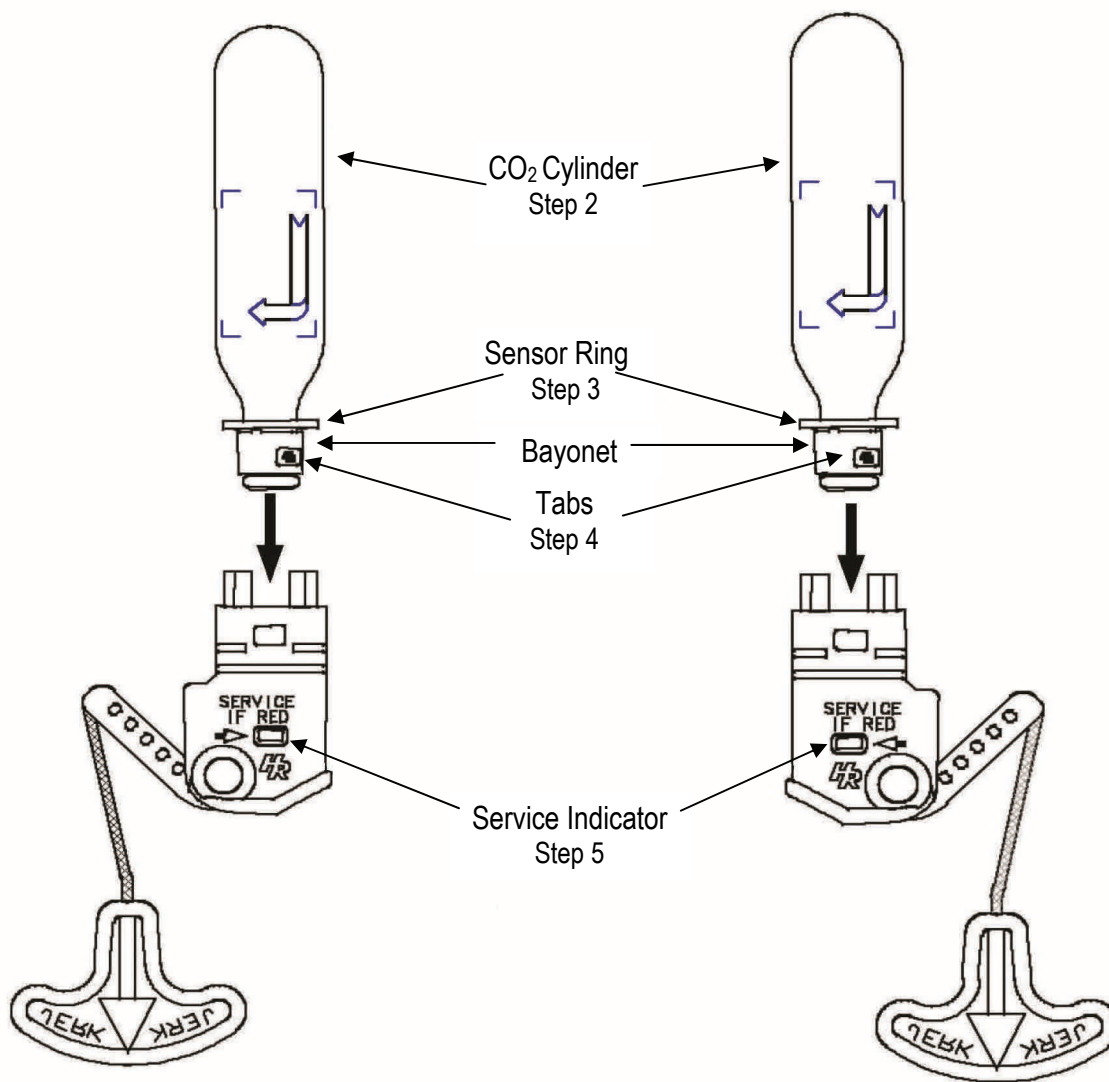

Note: Right and left hand models pictured above.
Your indicator will look like either the left or right image.