
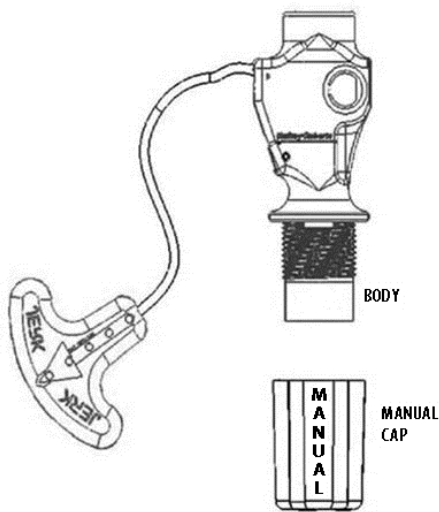


Step 1

Remove clear cap and bobbin.
Store in a dry place.

Refer to V90000 Manual/Auto rearming instructions to convert back to automatic backup.

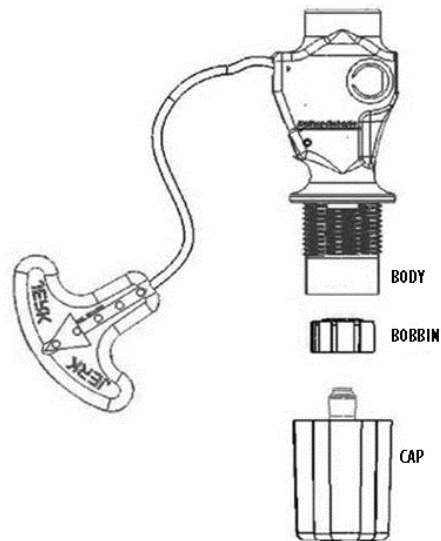


Step 2

Install "Manual" cap snugly on the inflator.

Step 3

Remove cylinder, inspect cylinder face.
If cylinder face has no holes or scratches,
replace firmly in inflator. Do not overtighten.
Make sure green indicator clip is in place.

See steps 8 and 9 of V90000 Inflator
Service Instructions for complete cylinder
instructions.

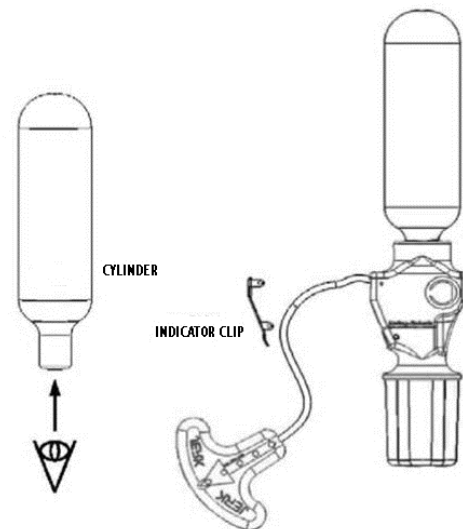

**Warning: Do not use the V90000 inflator without a cap in place.
Sharp edges may damage the life vest.**