
COMPRESSED AIR SUPPLY

Clean air in the compressed air system and a largely constant pressure at the required height is essential for the supply of this tool. The maximum pressure and other values of this air tool can be found in the **TECHNICAL DATA** section. An increase in pressure may be necessary if the length of the hose or other circumstances lead to a reduction in pressure at the switched-on air tool. It may be necessary to increase the pressure from 6.2 to for example 7.2 bar, in order to guarantee a pressure of 6.2 bar on the switched-on tool. Water in the hose and compressor leads to reduced efficiency and damage to the air tool. Drain the compressed air system before each use.
Use a pressure regulator with pressure gauge if the pressure in the compressed air system is too high.


RECOMMENDED COMPRESSED AIR SYSTEM

No.	Designation	No.	Designation
1	Air tool	6	Drainage/filtering unit
2	Air hose	7	Drainage valve
3	Quick coupling	8	Shut-off valve
4	Oiler (only required for DL tools with motor)	9	Dryer/filter unit
5	Pressure reducer	10	Compressor / 11 Drainage valve

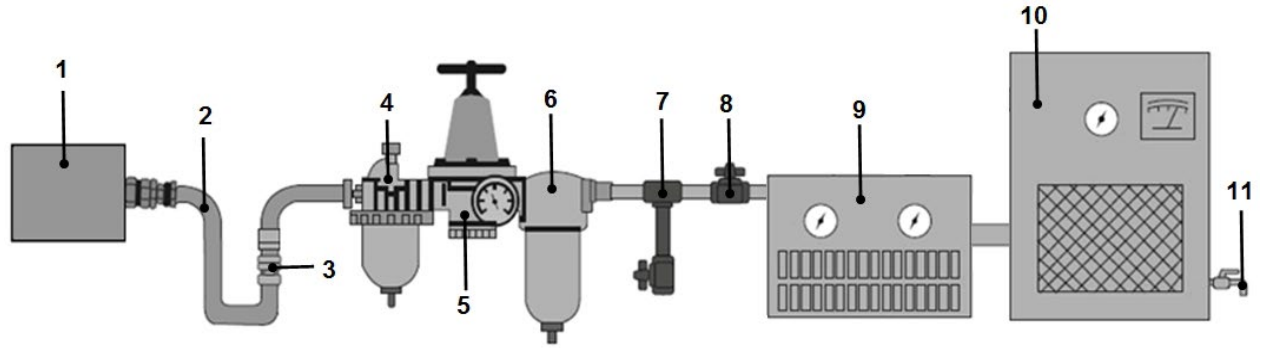

LUBRICATION & MAINTENANCE

Before use, add approx. 4 to 5 drops of air tool oil to the air inlet of the unit.

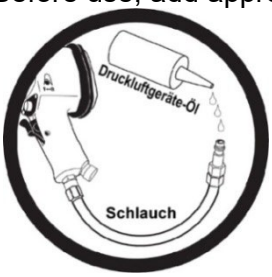

To lubricate this air tool, use only oil which is suitable for air tools.
Never lubricate the device with engine oil, transmission oil, power steering oil, etc.



TROUBLESHOOTING (power loss)

Probable cause	Solution
Dirty or blocked air ducts	Lubricate tool, drain compressor and feed lines
Insufficient air supply	Increase air pressure. Ensure that the compressor meets air volume and pressure requirements
Leakage	Use Teflon tape to seal all fittings and connectors
Check O-rings and seals	Replace worn or damaged parts if necessary
Tool insert	Ensure that the tool can meet the requirements.

BGS technic KG
Bandwirkerstr. 3
D-42929 Wermelskirchen
Tel.: 02196 720480
Fax.: 02196 7204820
mail@bgs-technic.de
www.bgstechnic.com
© BGS technic KG, Copying and further use not allowed