USE (2-2)


Insert a grinding accessory like a grinding stone into the collet hole.



Re-install the collet fixing cap at clockwise direction by one wrench while holding the other wrench on the flats of the collet base. Make sure the collet fixing cap is securely tightened. Only use grinding accessories that have an RPM rating equal to or greater than the tool itself.



Remove the air cap from the tool air Inlet and connect the air supply hose to the tool. Set the air pressure to 6.2 bar (90 psi).

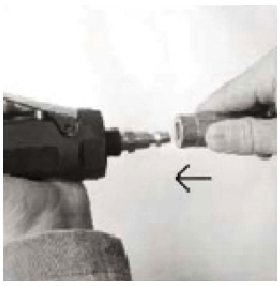

Push forward the throttle lever lock and press down on the throttle lever. How far the throttle lever is pressed determines the tool rotation speed. Then the tool starts to work.



ENVIRONMENTAL PROTECTION

Dispose of this product at the end of its working life environmentally. Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. Contact your local solid waste authority for recycling information



BGS technic KG
Bandwirkerstr. 3
D-42929 Wermelskirchen

Tel.: 02196 720480
Fax.: 02196 7204820
mail@bgs-technic.de

www.bgstechnic.com

© BGS technic KG, Copying and further use not allowed