



CLEARMIRROR



# IMPORTANT INSTALLATION NOTE: SEAL MIRROR EDGES

## Seal The Mirror Edges With Mastic

When applying mastic to secure mirror to wall, also run a continuous bead of mastic around the **entire perimeter**. This provides a moisture seal grout sealant, glass cleaners and other chemicals.

**We strongly encourage only soap and water be used to clean mirror and tile near the mirror.**


## Prevent Mirror From Turning Black

ClearMirror shower mirrors are made from mirror produced to the highest standards from American manufacturers. However, if chemicals other than mastic come in contact the mirror backing, it could turn the mirror black.

## MIRRORS THAT TURN BLACK AFTER INSTALLATION ARE NOT COVERED UNDER WARRANTY!

The only chemical that should contact the mirror backing is mirror mastic. Never use silicone.

Mastic will not harm the heater. Use as needed to safely secure the mirror.

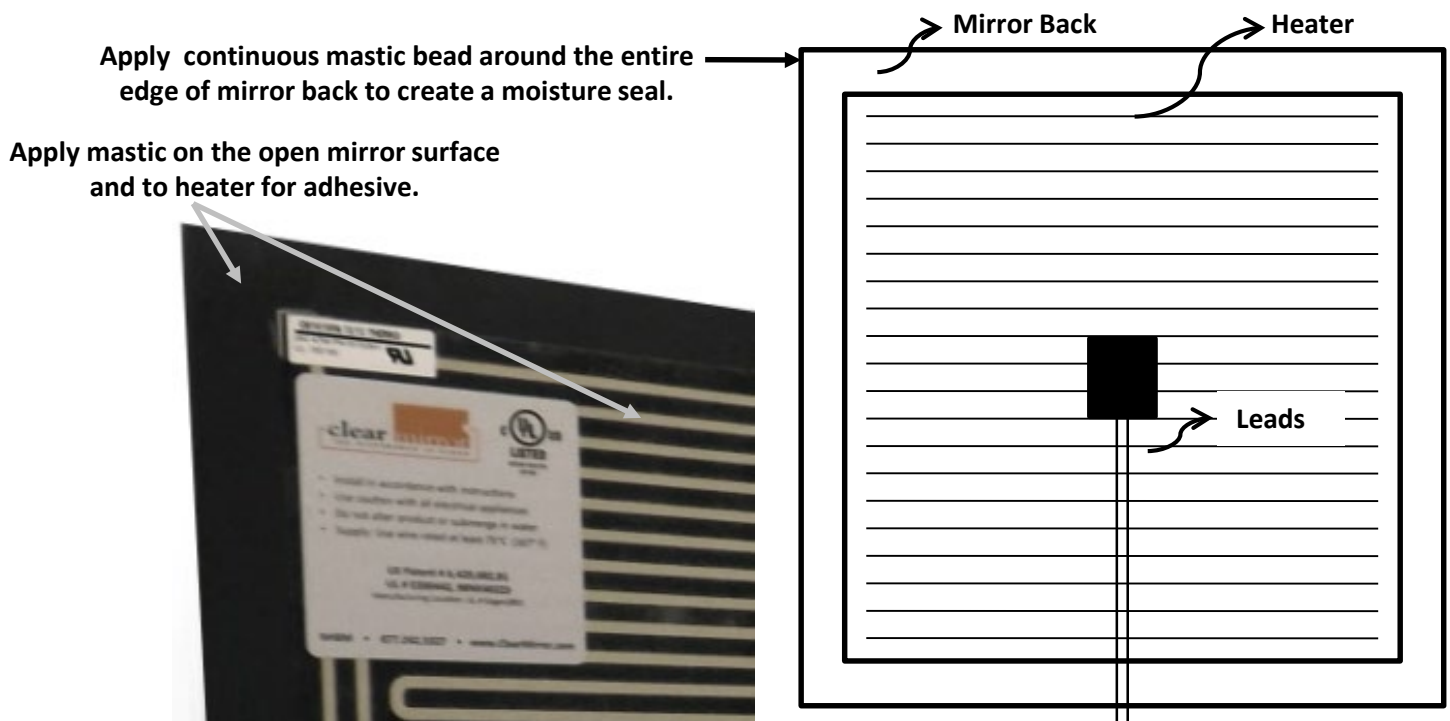

## Brace The Mirror – Mastic Times Vary

Tape or brace mirror in place until the mastic and grout are completely dry.

## Use Premium Mirror Mastic For Best Results

To prevent damage to the mirror backing, use **Gunther Premier Plus Mirror Mastic**.

It is available from your local mirror/glass specialist or online through Amazon or CR Laurence.

This product does have a shelf life so we are not able to provide it with your shower mirror.

Other mirror mastics will work but Gunther Premier Plus is recommended.



NewHome Bath & Mirror

425 Weir Drive • Woodbury, MN 55125 • 651.251.9036