

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT SPOILER FOR TOYOTA 86.


ATTENTION



- ※ **NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.**
- ※ **CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.**
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ **PLEASE BE AWARE OF:**
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.
 Use dryer to warm double sided tape to enhance the viscosity in low temperature.
 Keep the car in a dry condition more than 24 hours after gluing.
 Do not wash the car during this time.

	PARTS	QUANTITIES
FRONT HALF SPOILER	FRONT SPOILER	1
	TAPPING SCREWS (M4 x 15)	4

 Use caulking glue to fill the gap between the product and the body.

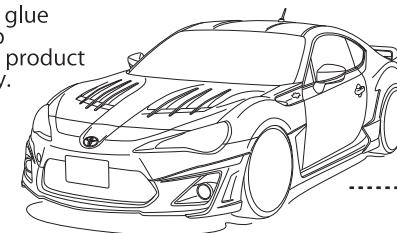

FRONT HALF SPOILER

[BEFORE PAINTING]


- 1) Temporarily install WALD Front Spoiler to the body.
- ※ Adjust the details of WALD Front Spoiler to fit the body by rasps or sandpapers.

- 2) Check all the balance and fitting, then mark the installation positions for the attached tapping screws.

- 3) Taking off WALD Front Spoiler from the body, then make holes according to the marked positions.

[AFTER PAINTING]

- 4) Completely degrease the installation position.
- 5) Temporarily install WALD Front Spoiler to the body.
- 6) Use caulking glue to fix WALD Front Spoiler.
- 7) Leave it till completely fixed.

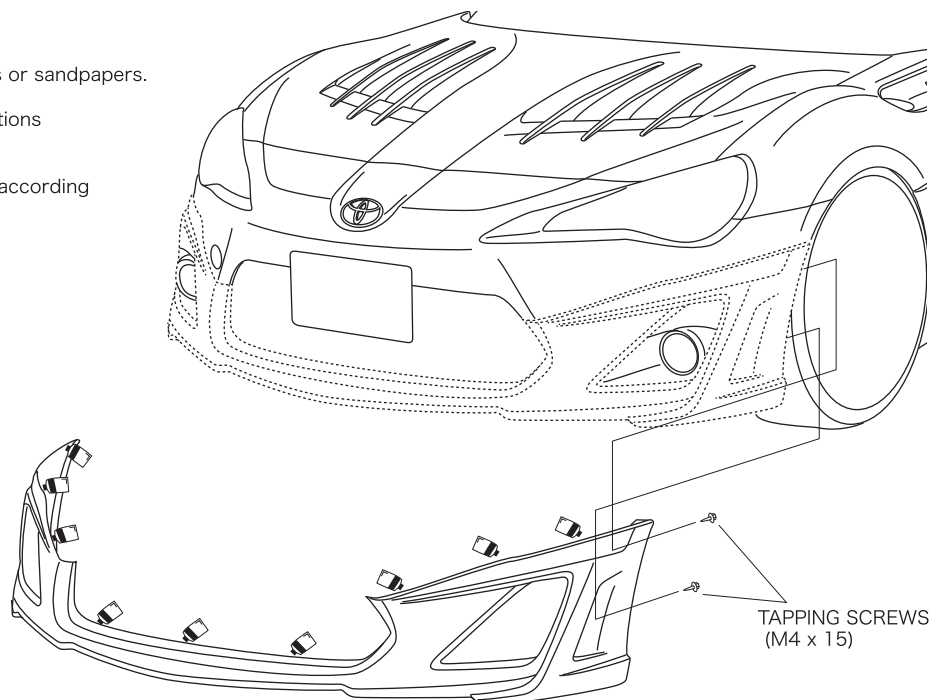
ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK. DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ ADJUST ALL THE DETAILS OF OUR PRODUCTS TO FIT ON A CAR PERFECTLY.


 WALD.INTernational

TOYOTA 86 ZN6 (2012y~)

WALD SPORTS LINE

INSTALLATION MANUAL
WALD
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD SIDE STEPS FOR TOYOTA 86.

ATTENTION




- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
 - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
 - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
 - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
 - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.
Use dryer to warm double sided tape to enhance the viscosity in low temperature.
Keep the car in a dry condition more than 24 hours after gluing.
Do not wash the car during this time.

	PARTS	QUANTITIES
SIDE STEP	SIDE STEPS	1 SET
	TAPPING SCREWS (M4 x 15)	4
	BOLTS & WASHERS (M5 x 15)	4 SETS
	U-SHAPED NUTS	4

Use caulking glue to fill the gap between the product and the body.

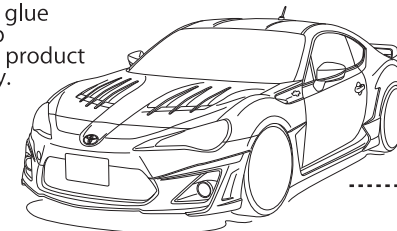

SIDE STEP

[BEFORE PAINTING]

- 1) Temporarily install WALD Side Steps to the body with the attached U-Shaped nuts.
- ※ Adjust the details of WALD Side Steps to fit the body by rasps or sandpapers.

- 2) Check all the balance and fitting, then mark the installation positions for the attached tapping screws.

- 3) Taking off WALD Side Steps from the body, then make holes according to the marked positions.

[AFTER PAINTING]

- 4) Completely degrease the installation positions.
- 5) Temporarily install WALD Side Steps to the body.
- 6) Use caulking glue to fix WALD Side Steps.
- 7) Leave them till completely fixed.

■ HOW TO INSTALL THE ATTACHED U-SHAPED NUTS (STEP 1)

Taking off the OEM clips bound the OEM inner-liners, then fix the attached U-Shaped nuts according to the holes on the OEM fenders.

ATTACHED U-SHAPED NUTS

ATTACHED TAPPING SCREWS (M 4 x 15)

ATTACHED BOLTS (M5 x 15)

ATTENTION

※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK. DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

※ ADJUST ALL THE DETAILS OF OUR PRODUCTS TO FIT ON A CAR PERFECTLY.

WALD INTERNATIONAL

TOYOTA 86 ZN6 (2012y~)

WALD SPORTS LINE

INSTALLATION MANUAL
WALD
Sportliche Autoausrüstung WALD International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD REAR BUMPER FOR TOYOTA 86.

ATTENTION



- ※ **NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.**
- ※ **CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.**
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
 - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
 - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
 - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
 - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.


Use dryer to warm double sided tape to enhance the viscosity in low temperature.

Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

	PARTS	QUANTITIES
REAR BUMPER	REAR BUMPER	1
	BRACKETS WITH NUTTERS	2
	BOLTS (M5 x 15) & WASHERS	4 SETS
	WELL NUTS	2

Use caulking glue to fill the gap between the product and the body.

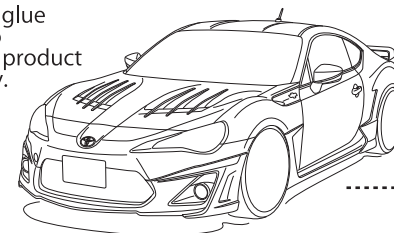

REAR BUMPER

[BEFORE PAINTING]

- 1) Remove OEM rear bumper according to the Toyota service manual.
- 2) Temporarily install WALD Rear Bumper to the body with the attached brackets.
- ※ Adjust the details of WALD Rear Bumper to fit the body by rasps or sandpapers.
- 3) Process OEM back-up light to fit on WALD Rear Bumper according to the attached picture.
- 4) Paint WALD Rear Bumper according to the picture.

[AFTER PAINTING]

- 5) Fix OEM back-up light with the attached bolts and well nuts to WALD Rear Bumper.
- 6) Temporarily fix WALD Rear Bumper to the body.
- 7) Check all the details of the fitment, then tighten all the bolts and clips.

ATTENTION


※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK. DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

※ ADJUST ALL THE DETAILS OF OUR PRODUCTS TO FIT ON A CAR PERFECTLY.



■ HOW TO INSTALL OEM BACK-UP LIGHT (STEP 3)

Cut the T-Shaped projection from the surface of the lens, then fix the attached well nuts. Install OEM back-up light to WALD Rear Bumper according to the upper part.

※ Adjust the details of WALD Rear Bumper to fit OEM back-up light by rasps or sandpapers.

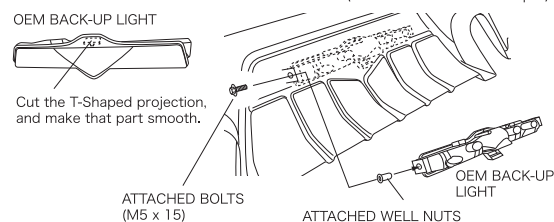

※ WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 4)

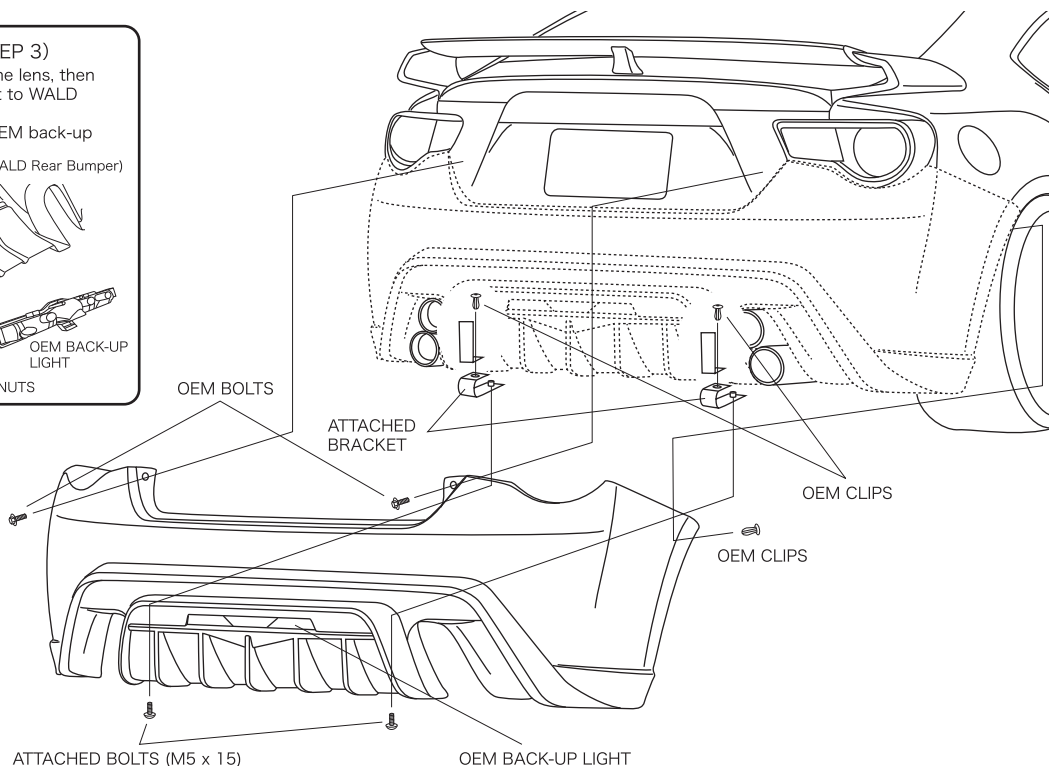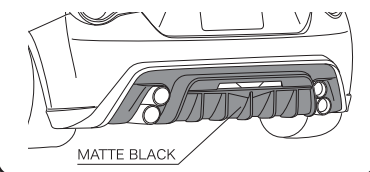

TOYOTA 86 ZN6 (2012y~)

WALD SPORTS LINE

INSTALLATION MANUAL
WALD
Sportliche Autoausrüstung WALD International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD AERO BONNET FOR TOYOTA 86.

ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force. Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper. Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
 - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
 - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
 - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
 - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.

Use dryer to warm double sided tape to enhance the viscosity in low temperature.


Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

	PARTS	QUANTITIES
AERO BONNET	BONNET	1
	MESHERS	1SET
	HOOD STRIKER	1
	BOLTS (M6 x 20) & WASHERS	4 SETS
RAIN PROTECTOR	RAIN PROTECTOR	1
	BOLTS (M5 x 15) & WASHERS	7 SETS



Use caulking glue to fill the gap between the product and the body.

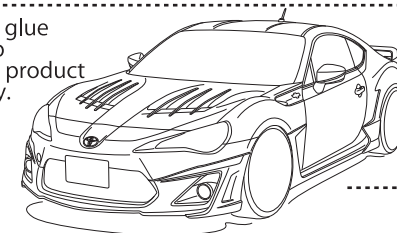

AERO BONNET

[BEFORE PAINTING]

- 1) Remove OEM bonnet according to the Toyota service manual.
- 2) Temporarily fix the attached hood striker and Rain Protector (Sold Separately) and install WALD Aero Bonnet to the body.
※ Adjust the details of WALD Aero Bonnet to fit the body by rasps or sandpapers.
- 3) Paint WALD Aero Bonnet after checking the location and balance.


[AFTER PAINTING]

- 4) Fix the attached meshes to WALD Aero Bonnet from the rear with the caulking glue.
- 5) Fix all the necessary parts to WALD Aero Bonnet, then install to the body.
- 6) Tighten attached bolts and OEM bolts after checking the balance.

■ HOW TO INSTALL WALD RAIN PROTECTOR (STEP 2, 5)

Install WALD Rain Protector to WALD Aero Bonnet with the attached bolts.
※ Adjust the details of WALD Aero Bonnet and Rain Protector to fit by rasps or sandpapers.


RAIN PROTECTOR (Sold Separately)
※ Fixed with the attached bolts (M5 x 15).

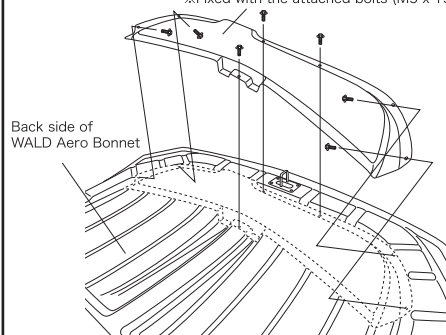

Back side of WALD Aero Bonnet

■ HOW TO INSTALL THE ATTACHED MESH (STEP 4)


Use pins and caulking glue to install the attached meshes to WALD Rear Bumper from the rear.

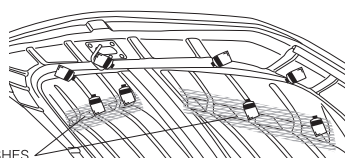

ATTACHED MESHERS

ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK. DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ ADJUST ALL THE DETAILS OF WALD PRODUCTS TO FIT ON THE BODY.

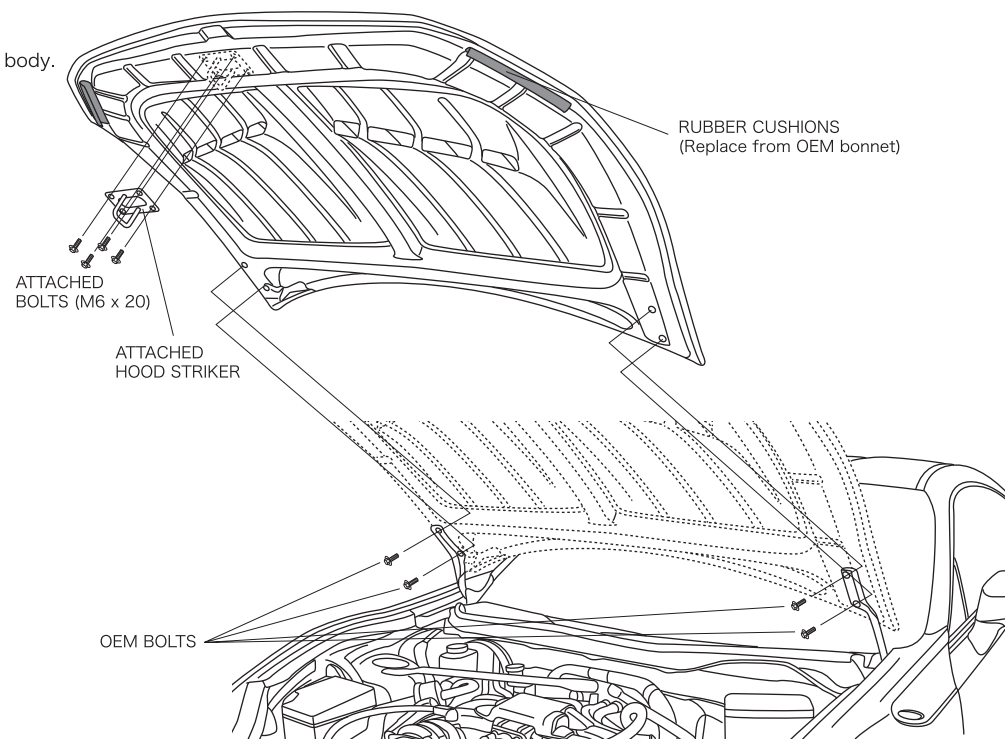

WALD INTERNATIONAL

WALD INTERNATIONAL

ADD: 10-13 KYOGUCHI-CHO, TAKATSUKI, OSAKA, JAPAN

ZIP: 569-0072 TEL: (81)-72-673-3000 FAX: (81)-72-673-3003

2013/02

TOYOTA 86 ZN6 (2012y~)

WALD SPORTS LINE

INSTALLATION MANUAL
WALD
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD OVER FENDER FOR TOYOTA 86.

ATTENTION




- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
 - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
 - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
 - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
 - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.
Use dryer to warm double sided tape to enhance the viscosity in low temperature.
Keep the car in a dry condition more than 24 hours after gluing.
Do not wash the car during this time.

	PARTS	QUANTITIES
OVER FENDER	OVER FENDER	1 SET
	TAPPING SCREWS (M4 x 15)	12

Use caulking glue to fill the gap between the product and the body.

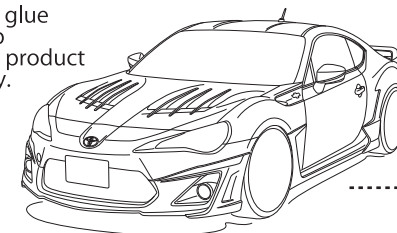

OVER FENDER


[BEFORE PAINTING]

- 1) Temporarily install WALD Over Fender to the body.
- ※Adjust the details of WALD Over Fender to fit the body by rasps or sandpapers.

- 2) Use masking tape to mark the installation positions.
- 3) Make holes for the attached tapping screws to install WALD Over Fender to the body.

[AFTER PAINTING]

- 4) Completely degrease the installation position, then use caulking glue to install WALD Over Fender to the body according to the marked position.
- 5) Check all the details of the fitment, and leave it till completely fixed.

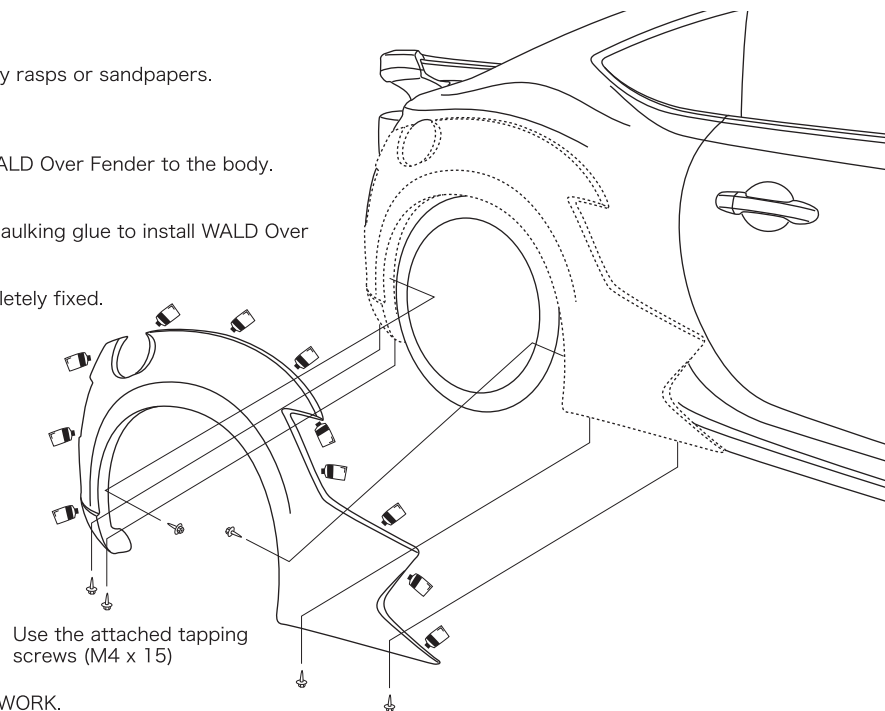

Use the attached tapping screws (M4 x 15)

ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ DEGREASE ALL THE INSTALLATION POSITION, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

WALD INTERNATIONAL

TOYOTA 86 ZN6 (2012y~)

WALD SPORTS LINE

INSTALLATION MANUAL
WALD
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD REAR WING FOR TOYOTA 86.

ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
 - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
 - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
 - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
 - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.

Use dryer to warm double sided tape to enhance the viscosity in low temperature.


Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

	PARTS	QUANTITIES
REAR WING	REAR WING	1
	BOLTS (M6 x 20)	8
	BOLTS (M5 x 20) & WASHERS	1 SET
	SAMPLE GAVFE FOR HOLES	1 SET



Use caulking glue to fill the gap between the product and the body.

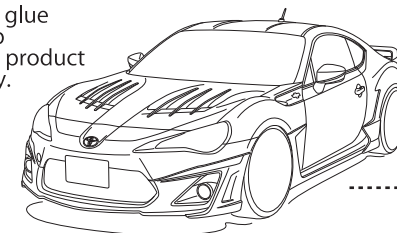

REAR WING

【BEFORE PAINTING】


- 1) Put Sample Gauge on the trunk to check the locations for the holes and mark them.
- 2) Take off Sample Gauge, then make holes according to the marked positions.
 - ※ Recommend to make holes bigger than the size needed.
- 3) Mount the rear wing flap on the basement, then temporarily put it on the body.
- ※ Adjust the details of WALD Rear Wing to fit the body by rasps or sandpapers.

【AFTER PAINTING】

- 4) Completely degrease the installation position, then use caulking glue to mount the rear wing flap to the basement with the attached bolts.
- 5) Use caulking glue to install WALD Rear Wing on the body after degreasing the installation positions.
- 6) Fix the WALD Rear Wing with the attached bolts.
- 7) Leave it till completely fixed.

ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK. DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ DEGREASE ALL THE INSTALLATION POSITION, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

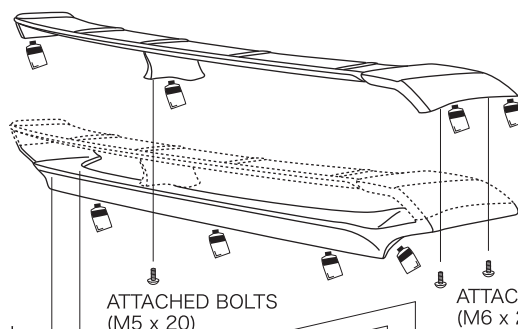

■ HOW TO MAKE HOLES (STEP 2)


Make holes according to the picture.
※ Need Water and Rust Proof for the holes.

Inside of the trunk

Locations for holes

REAR WING

ATTACHED BOLTS (M6 x 20)
(Fixed from the inside of the trunk)

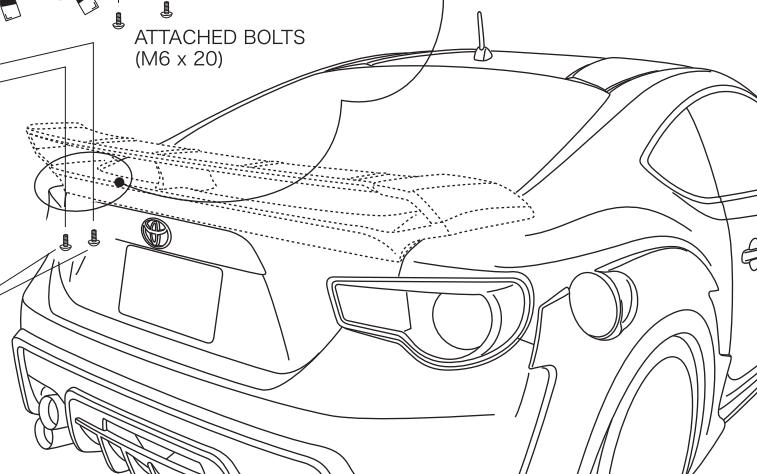

WALD INTERNATIONAL