Page 1 of 4



This set contains a selection of measuring tools most suitable for students and apprentices

Set contents:

Metric Set: 50-610-025

Fine Adjustment Vernier Caliper: 145mm / 5 ½"

Mechanical Micrometer: 0-25mm Satin Chrome Rule: 150mm/6"

Inch Set: 50-610-001


Fine Adjustment Vernier Caliper: 145mm / 5 1/2"

Mechanical Micrometer: 0-25mm Satin Chrome Rule: 150mm/6"

### Packed Weight and Dimensions

	Code	Description	Weight g	W mm	H mm	L mm
Ī	50-610-025	Mechanical Measuring Set: Metric	680	140	45	255
	50-610-001	Mechanical Measuring Set: Inch	680	140	45	255

# **Dial Calipers**

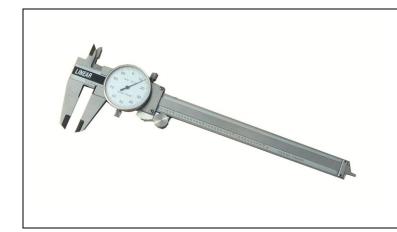

Hardened stainless steel body

Satin chrome finish

Thumbroll

Depth Rod

Four-way measurement:

Outside

Inside

Step

Depth


White dial face

Code	Range	Metric Grads	Inch Grads	Accuracy	External Jaw Depth	Internal Jaw Depth
51-200-150	150mm	0.02mm	N/A	±0.02mm	40mm	18mm
51-200-006	6"	N/A	0.001"	±0.02mm	40mm	18mm


Copyright: Linear Tools 2011

Page 2 of 4


### Mechanical Micrometers 50-100-Series

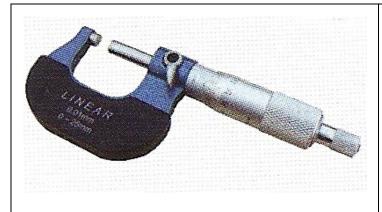

Accuracy conforms to DIN 863 Resolution: Metric 0.01mm, Inch 0.0001" Models above 25mm / 1" supplied with setting rod Micro fine graduations for accurate reading Tungsten carbide measuring faces Spindle locking lever Ratchet stop Non-glare satin chrome barrel and sleeve Blue baked enamel hammer tone finish Supplied in fitted case with adjustment tools

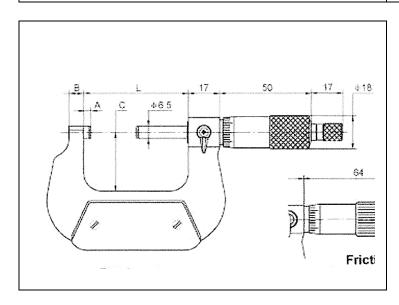

Code	Range	Code	Range	Style	A	В	С	L	Accuracy
					mm	mm	mm	mm	mm
Metric	mm	Inch	inch						
50-100-025	0-25	50-100-001	0-1	A	3.0	6	24.0	32	0.004

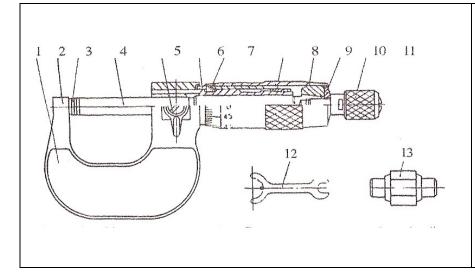

- Heat Resistant Plate 1
- 2 Frame
- 3 Anvil
- 4 Spindle
- 5 Spindle Lock
- Sleeve
- 7 Thimble
- 8 Barrel
- 9
- **Taper**
- 10 End Cap
- Ratchet Stop 11
- 12 Spanner
- Setting Standard 13

Copyright: Linear Tools 2011

Page 3 of 4

#### Mechanical Micrometers 50-100-Series

### Cleaning and Basic Checking Procedure

Remove any oil, grease, dust or small particles which may cause damage to the micrometer or affect its accuracy when taking measurements. Use a soft lint free cloth or paper together with a proprietary instrument cleaning agent. Do not use acetone as this can damage parts of the micrometer

## Zero Point Checking and Adjustment

Use the ratchet stop to move the spindle until it touches the fixed anvil. Allow the ratchet to turn 1 ½ to 2 revolutions for the final positioning

The zero point on the thimble should now coincide with the reference graduated base line on the sleeve For micrometers above 25mm / 1" use the supplied setting standard or a gauge block to check the zero position If the zero point does not line up as required, it can be corrected by using the following procedure When the zero point deviation on the thimble is under 2 divisions from the graduated base line Turn the sleeve using the "C" spanner provided until correct alignment is achieved When the zero point deviation on the thimble is over 2 divisions from the graduated base line Hold the frame and the thimble and loosen the ratchet stop using the spanner provided Disconnect the coupling of the thimble to the spindle by giving a light shock to the side of the thimble Turn the thimble until the zero point is in alignment with the base line on the sleeve Press the thimble against the spindle and re tighten with the spanner to achieve a positive coupling

Re check the zero position, any final small adjustment can now be made using the "C" spanner to re position the sleeve to the thimble zero


### Reading the Micrometer

When reading the micrometer ensure that your line of sight is directly above the graduated scale on the sleeve and the thimble scale to avoid parallax reading errors

Ensure that the micrometer and the work piece are at the same temperature

Handle the instrument with care, if it is dropped or knocked in any way it must be rechecked for correct working and accuracy as above

Reading Example: Metric Reading Example: Inch

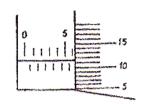


Example for division 0.01mm

Reading:

From Sleeve: 6mm
From thimble: 0.11mm
Final readings should be

6. + 0.11 = 6.11mm

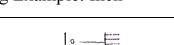

Best alignment

Example for division 0.002mm

Reading:

From Sleeve: 4mm
From thimble: 0.23mm
From vernier of sleeve:


0.004mm

Final readings should be

4 + 0.23 + 0.004 = 4.234mm

Page 4 of 4

### Steel Rule Metric and Inch Two Sided with Round End

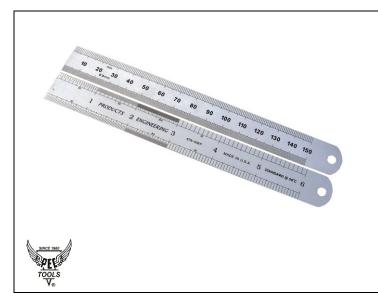

Conform to EEC-Class 1, Ref 73/362/EEC Manufactured from high quality steel Fully hardened and tempered Non-glare satin chrome finish Graduations etched from precise glass masters for repeated accuracy

Code	Length	Type	Width and	Rule Marking	Rule Marking	Style	End
			Thickness	Front Face (inch)	Reverse Face Metric)		Style
678-006F	150mm / 6"	Rigid	19 x 0.5mm	16ths, 32nds, 64ths	1.0mm and 0.5mm	64R	D
				10ths, 20ths, 50ths, 100ths			End

### **Accuracy Specification**

EEC Directive 73-362 / EEC: Rules Class 1 and 2

For Metric Scales Only: (there is no specification for Inch Scales)

Permissible Errors: For EEC Class 1 Rules

Maximum permissible error between 2 intervals upto 1 mm = 0.1 mm

Maximum permissible error between two intervals not exceeding 10mm = 0.2mm

From Rule End: Above tolerance increased by 0.1mm

#### Examples:

Rule End to 1mm graduation = Normal Tol. 0.1mm + Additional Tol. 0.1mm = 0.2mm

Rule End to 10mm graduation = Normal Tol. 0.2mm + Additional Tol. 0.1mm = 0.3mm

Overall Length Tolerance

$$Tol = [a + (b \times L)]$$

a = 0.1 for class 1

b = 0.1 for class 1

L = Length of scale rounded up to the nearest metre

Example for a 300mm rule, when measurement is taken from the 10mm graduation to the 300mm graduation:  $Tol = [0.1 + (0.1 \times 1)] = 0.2$ mm

Copyright: Linear Tools 2011