
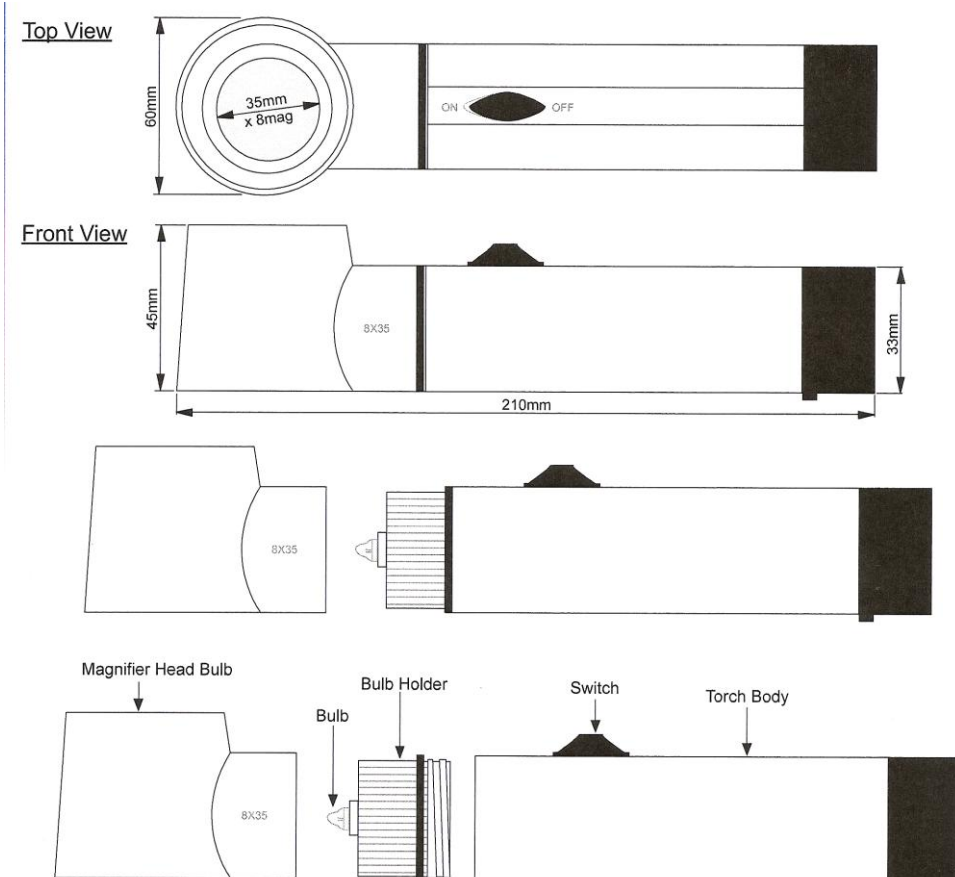


Hand Held Magnifier X8 Mag. 59-671-007

| | |
|---|---|
|  | <p>High quality Hand Held Magnifier offers:</p> <ul style="list-style-type: none"> Low image distortion Aspheric lens Magnification X8 mag. Lens diameter 35mm Power supply: 2 x C batteries (not supplied) Illumination: 1 x 2.5v 250mA bulb |
|---|---|

Packed Weight and Dimensions

| Code | Description | Weight g | W mm | H mm | L mm |
|------------|---|----------|------|------|------|
| 59-671-007 | Hand Held Magnifier X8 Mag. | 185 | 70 | 60 | 230 |
| 59-675-041 | Replacement Lamp 2.2V, 250 mA Screw fitting | 5 | 30 | 15 | 40 |



Bulb Replacement
 Pull to remove Magnifier Head from splined Bulb Holder.
 Unscrew bulb (2.2v - 0.25A)
 Replace correct bulb and push Magnifier Head back onto spline of bulb holder with switch and magnifier lens aligned.

Battery Replacement
 Remove Magnifier Head from splined Bulb Holder.
 Grip splined diameter and unscrew torch body.
 Insert 2 x Size L - 1.5v batteries with + ends pointing towards bulb.
 Replace bulb holder and Magnifier Head as above.